

Installation Guide: Glass Whiteboard



Installation of your glass whiteboard will require two people. It is recommended the board be affixed directly to wall studs for improved sturdiness. If wall studs are not available, Wall-Mates may be used to improve holding strength.

Required Tools



Drill



Tape Measure



Spirit Level




Pencil

Installation Instructions


STEP 1

With a tape measure and pencil, mark the chosen area for installation of your glass whiteboard. Measure from the floor to the bottom of the board, then to the top of the board, followed by the sides. Use a spirit level to ensure markings are straight.

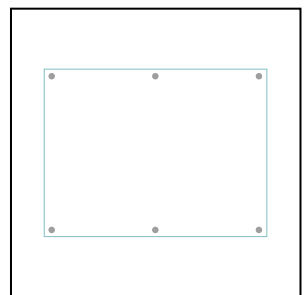


STEP 2

Place the board on the pencil markings by lining up the bottom edge of the board along the bottom pencil line. Use a pencil to mark the screw positions through the holes on the glass whiteboard.

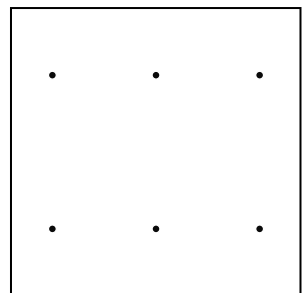


STEP 3

Place the board to the side and drill holes in the marked positions.

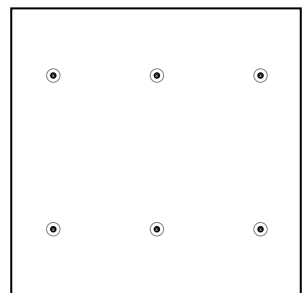

STEP 4

Screw the stand-off anchors into the wall or Wall-Mates. Screw the thread studs into place using your hand.

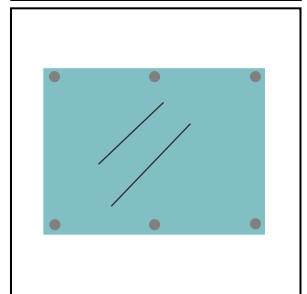

Always ensure wall area is clear of electrical wires before drilling. Whiteboards and Pinboards does not take any responsibility for injuries or breakages in the installation process of your pinboard. Installation is done at your own risk and all safety measures should be taken to avoid injury.