

# Frameless Pinboard Installation Guide

Installation of your pinboard will require TWO people. Where possible install pinboard to wall studs to deliver improved sturdiness. Where wall studs are not available Wall-Mates may be used to provide extra security when fixing your board to the wall.

## What you will need




- Drill
- Tape Measure
- Spirit Level
- Pencil

## Installation Instructions


### STEP 1

Mark a mounting point on each corner of the board measuring in roughly 35mm from the edges. Measure the distance between these points and with a tape measure and mark the wall area. (Measure floor to bottom of board, then to the top of the board followed by the sides). Use a spirit level to make marking straight.

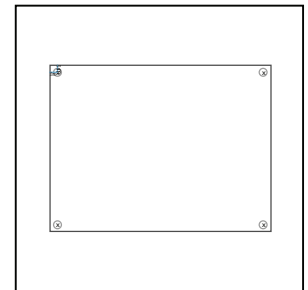


### STEP 2

Drill holes into the pre-marked wall to suit the supplied wall anchors. If using Wall-Mates follow manufacturer's instruction. Insert wall anchors.

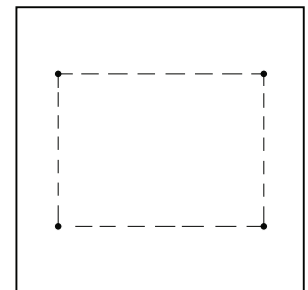

### STEP 3

With a screwdriver, screw the provided screws through the marks on the pinboard corners previously made in step 1. **DO NOT PRE-DRILL A HOLE INTO THE BOARD** with a drill bit as it will twist the fabric and your warranty will be voided. Ensure the threaded washer is installed on the screw beforehand for the stainless-steel screw cap to thread onto.

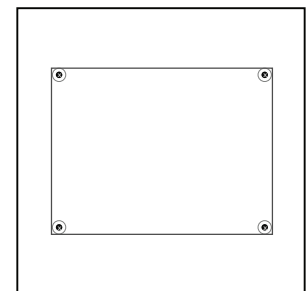


### STEP 4

Position the pinboard, fixing it into position by putting the screws into the wall plugs.

### STEP 5

Once the pinboard is secured in place install the stainless steel screw covers.

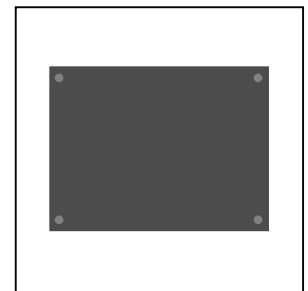

*\*Ensure wall area is clear of electrical wires before drilling.*

Whiteboards and Pinboards do not take any responsibility for injuries or breakages in the installation process of your pinboard. Installation is done at your own risk and all safety measures should be taken to avoid injury.