

UltraQuiet Home Office and Studio Acoustic Kit

Installation Instructions




Kit contents - acoustic panels

The kit includes 6 panels 830 x 415 x 50mm and 6 panels 415 x 415 x 50mm



Kit contents - mounting hardware

The mounting hardware is included. Everything you need is in the box

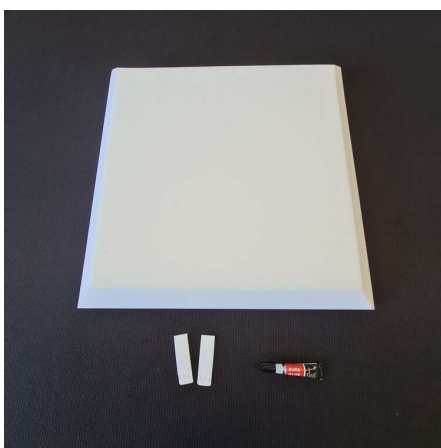

Installation - acoustic wall panel

For the small and large acoustic wall panels, the mounting hardware is shown in the picture - removable hook and loop strip and supa glue



Step 1 - apply the supa glue

Apply supa glue to the back top edge in the middle of the panel. A single line as long as the removable strip is needed.




Step 2 - apply the removable hook side

Unpeel the paper back from the removable strip and apply over the supa glue. (the sticky side goes on the supa glue) Press firmly and be careful not to get supa glue on yourself



Step 3 - apply to the wall

Put the other piece of the removable strip onto the one already on the panel. Remove the backing paper. Line up the panel where you want it to be installed and firmly press into place. Repeat for the remaining 8 Panels.

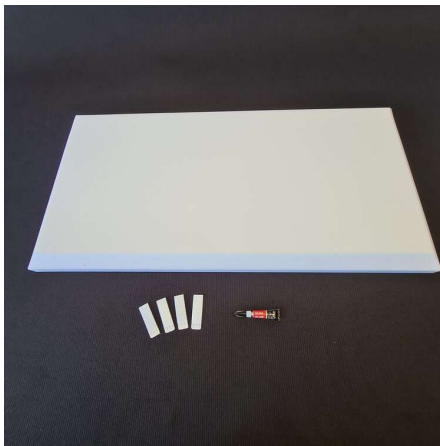

Low/Mid trap installation

For the Low/Mid Traps, the mounting hardware is shown in the picture - removable hook and loop strip and supa glue



Step -1 apply the supa glue

Apply supa glue to the beveled edge about 50mm down from the top corner on both sides



Step 2 - apply the removable hook side

Unpeel the paper back from the removable hook and apply over the supa glue



Step 3 - apply to the wall junction

Put the other piece of the removable strip onto the one already on the low/mid trap. Remove the backing paper. Line up the panel where you want it to be installed and firmly press into place. Repeat for other one.



Ceiling panel installation

For the ceiling panels you will need everything in the picture



Step 1- prepare the metal eyes

Screw in the metal eyelet into the plaster mate plugs



Step 2- prepare the plastic hoops

Start by sticking one side of the small removable strip to the plastic hoops




Step 3 - put the template on

Place the cardboard template on the back of the panel. Push in the metal hooks into the panel until the screw thread touches the panel



Close up of installed screw and eye

Screw in the plaster mate plug until its in fully

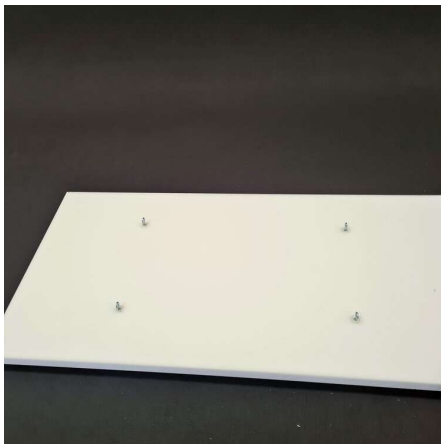


Screws in and ready to install



Step 4 - attach the string

Attach the string to the desired length to the metal eyes. Make sure they're all the same length. We recommend a loop at both ends

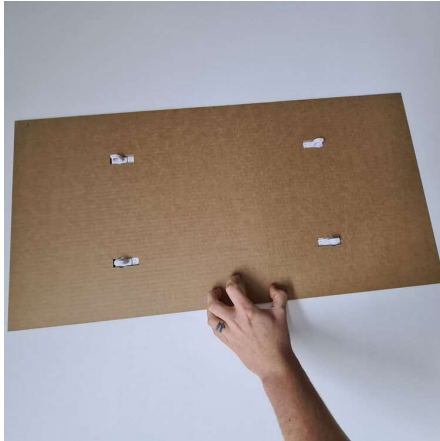

Step 5 - install the plastic loops

Place the template where you would like the ceiling panel to be installed, unpeel the wall side of the loops and install them using the template



Close Up

the removable loops will look like this




Plastic loops installed

we are now ready to install the panel



Step 6 - open the plastic loops

Open the loops ready to hook up the string

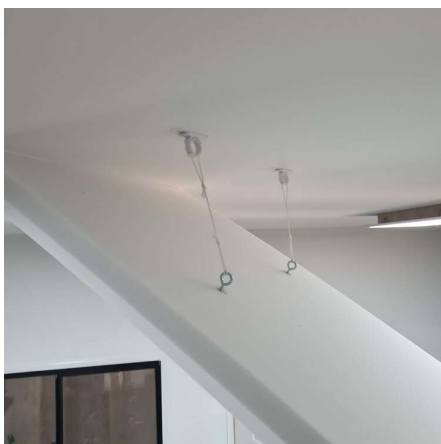


Step 7 - hook the string on and close the loops

As you can see, the panels are light enough to hang on 1 or 2 mounting points



Done

once installed, the string will hang straight

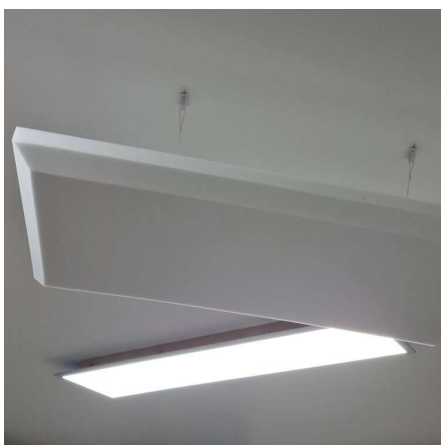

Installed


Now repeat for the remaining ceiling panel.



Installation Ideas


Note: These are just a guide for typical install. Also the ceiling panels can be direct stuck to the ceiling if desired. If a window is in the way of a wall panel. Install with 2 Wall Plugs in the same fashion as the ceiling panels and hang from the window architrave. If more removable (or different) mounting hardware is required, they are readily available from Hardware Stores.

Please Note: Panels installed close to Air Conditioning Grilles/Exhausts are susceptible to staining.

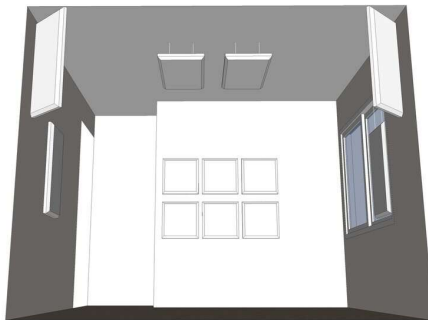

Installation Ideas

Make sure you install Low/Mid Traps in the Upper corners

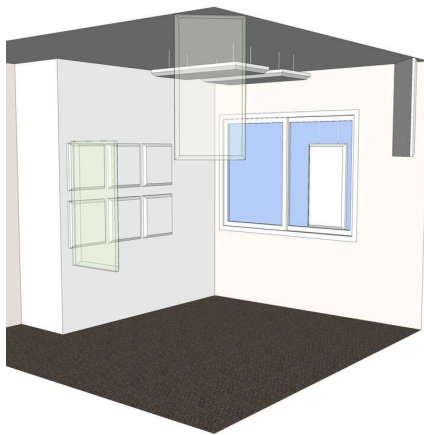

Thanks for purchasing and enjoy

If you need additional help or have any questions, please contact the Whiteboards and Pinboards team:

☎ 1300 849 152

✉ sales@whiteboardsandpinboards.com.au